




# M1805 ECO

USER/INSTALLER MANUAL



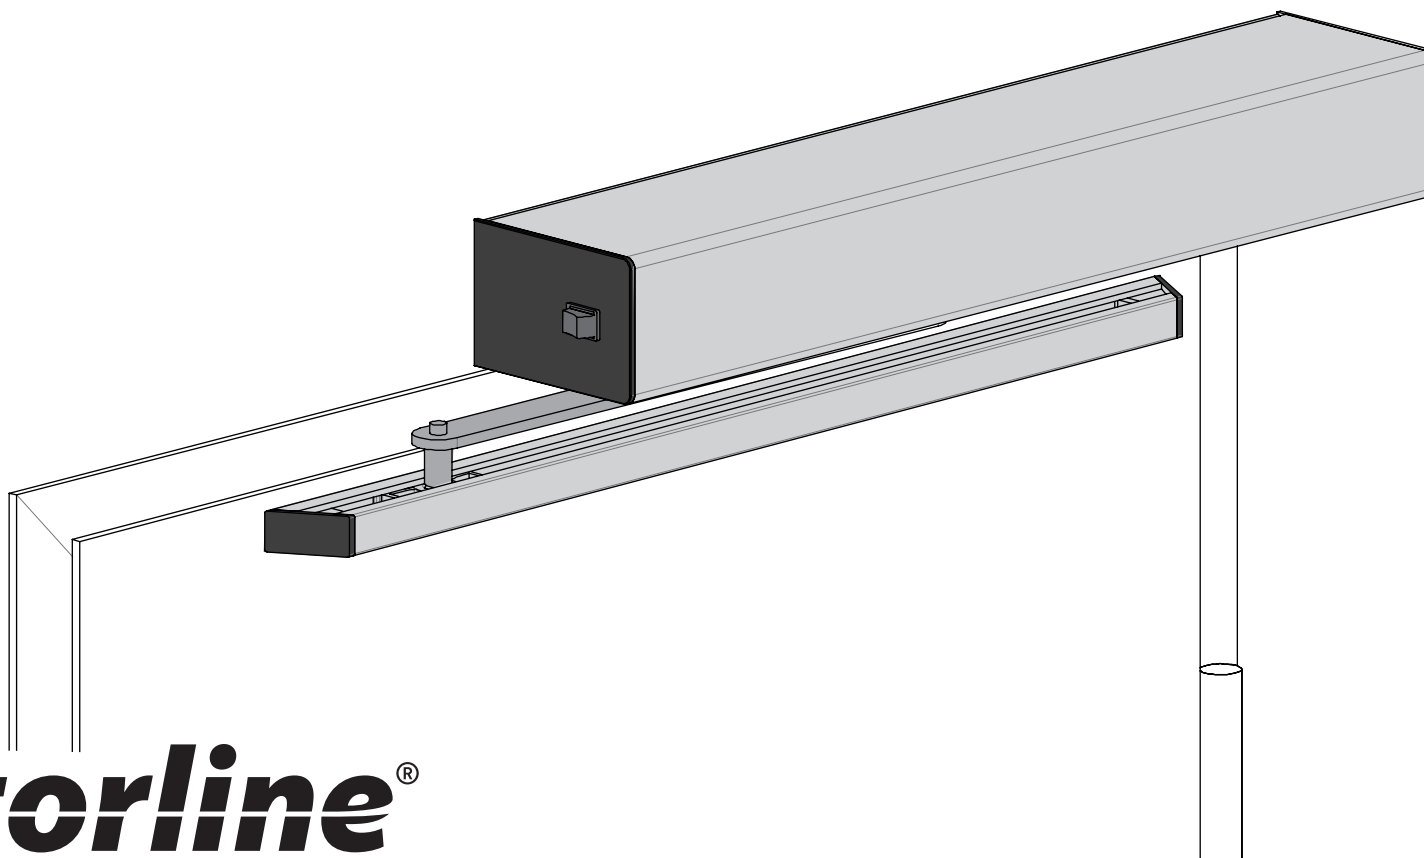





# 00. CONTENT

## INDEX

<b>01. SAFETY INSTRUCTIONS</b>	<b>2B</b>
<b>02. CONNECTION SCHEMES</b>	
COMPONENTS CONNECTION	5
RADARS AND PROGRAM SELECTOR CONNECTION	6
CONNECTION OF 2 SINGULAR DOORS WITH INTERLOCK	7
DOOR WITH 2 LEAVES	8
<b>03. THE AUTOMATION</b>	
TECHNICAL CHARACTERISTICS	9A
WIDTH/WEIGHT RATIO	9B
<b>04. PRE-INSTALLATION</b>	
INSTALLATION MEASURES   OPENING DIRECTION	10
<b>05. INSTALLATION</b>	
INSTALLATION PROCESS	11
<b>06. THE CONTROL BOARD</b>	
TECHNICAL CHARACTERISTICS	12A
PROGRAMMING	12B
DIGITAL DISPLAY AND FUNCTIONS	13
<b>07. TROUBLESHOOTING</b>	
INSTRUCTIONS FOR FINAL CONSUMERS / SPECIALIZED INSTALLERS	14

# 01. SAFETY INSTRUCTIONS

	This product is certified in accordance with European Community (EC) safety standards.
	This product complies with Directive 2011/65/EU of the European Parliament and of the Council, of 8 June 2011, on the restriction of the use of certain hazardous substances in electrical and electronic equipment and with Delegated Directive (EU) 2015/863 from Commission.
	(Applicable in countries with recycling systems). This marking on the product or literature indicates that the product and electronic accessories (eg. Charger, USB cable, electronic material, controls, etc.) should not be disposed of as other household waste at the end of its useful life. To avoid possible harm to the environment or human health resulting from the uncontrolled disposal of waste, separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Home users should contact the dealer where they purchased this product or the National Environment Agency for details on where and how they can take these items for environmentally safe recycling. Business users should contact their vendor and check the terms and conditions of the purchase agreement. This product and its electronic accessories should not be mixed with other commercial waste.
	This marking indicates that batteries should not be discarded like other household waste at the end of their useful life. Batteries must be delivered to selective collection points for recycling.
	The different types of packaging (cardboard, plastic, etc.) must be subject to selective collection for recycling. Separate packaging and recycle it responsibly.
	This marking indicates that the product and electronic accessories (eg. charger, USB cable, electronic material, controls, etc.) are susceptible to electric shock by direct or indirect contact with electricity. Be cautious when handling the product and observe all safety procedures in this manual.

# 01. SAFETY INSTRUCTIONS

## **GENERAL WARNINGS**

- This manual contains very important safety and usage information. Read all instructions carefully before beginning the installation/usage procedures and keep this manual in a safe place that it can be consulted whenever necessary.
- This product is intended for use only as described in this manual. Any other enforcement or operation that is not mentioned is expressly prohibited, as it may damage the product and put people at risk causing serious injuries.
- This manual is intended firstly for specialized technicians, and does not invalidate the user's responsibility to read the "User Norms" section in order to ensure the correct functioning of the product.
- The installation and repair of this product may be done by qualified and specialized technicians, to assure every procedure are carried out in accordance with applicable rules and norms. Nonprofessional and inexperienced users are expressly prohibited of taking any action, unless explicitly requested by specialized technicians to do so.
- Installations must be frequently inspected for unbalance and the wear signals of the cables, springs, hinges, wheels, supports and other mechanical assembly parts.
- Do not use the product if it is necessary repair or adjustment is required.
- When performing maintenance, cleaning and replacement of parts, the product must be disconnected from power supply. Also including any operation that requires opening the product cover.
- The use, cleaning and maintenance of this product may be carried out by any persons aged eight years old and over and persons whose physical, sensorial or mental capacities are lower, or by persons without any knowledge of the product, provided that these are supervision and instructions given by persons with experienced in terms of usage of the product in a safe manner and who understands the risks and dangers involved.

- Children shouldn't play with the product or opening devices to avoid the motorized door or gate from being triggered involuntarily.
- If the power cable is damaged, it must be replaced by the manufacturer, after-sales service or similarly qualified personnel to avoid danger.
- The device must be disconnected from the electrical network when removing the battery.
- Ensure that blocking is avoided between the actuated part and its fixed parts due to the opening movement of the actuated part.

## **WARNINGS FOR TECHNICIANS**

- Before beginning the installation procedures, make sure that you have all the devices and materials necessary to complete the installation of the product.
- You should note your Protection Index (IP) and operating temperature to ensure that is suitable for the installation site.
- Provide the manual of the product to the user and let them know how to handle it in an emergency.
- If the automatism is installed on a gate with a pedestrian door, a door locking mechanism must be installed while the gate is in motion.
- Do not install the product "upside down" or supported by elements do not support its weight. If necessary, add brackets at strategic points to ensure the safety of the automatism.
- Do not install the product in explosive site.
- Safety devices must protect the possible crushing, cutting, transport and danger areas of the motorized door or gate.
- Verify that the elements to be automated (gates, door, windows, blinds, etc.) are in perfect function, aligned and level. Also verify if the necessary mechanical stops are in the appropriate places.
- The control board must be installed on a safe place of any fluid (rain, moisture, etc.), dust and pests.
- You must route the various electrical cables through protective tubes, to protect them against mechanical exertions, essentially on

# 01. SAFETY INSTRUCTIONS

the power supply cable. Please note that all the cables must enter the control board from the bottom.

- If the automatism is to be installed at a height of more than 2,5m from the ground or other level of access, the minimum safety and health requirements for the use of work equipment workers at the work of Directive 2009/104/CE of European Parliament and of the Council of 16 September 2009.
- Attach the permanent label for the manual release as close as possible to the release mechanism.
- Disconnect means, such as a switch or circuit breaker on the electrical panel, must be provided on the product's fixed power supply leads in accordance with the installation rules.
- If the product to be installed requires power supply of 230Vac or 110Vac, ensure that connection is to an electrical panel with ground connection.
- The product is only powered by low voltage safety with control board (only at 24V motors).
- Parts/products weighing more than 20 kg must be handled with special care due to the risk of injury. It is recommended to use suitable auxiliary systems for moving or lifting heavy objects.
- Pay special attention to the danger of falling objects or uncontrolled movement of doors/gates during the installation or operation of this product.

## WARNINGS FOR USERS

- Keep this manual in a safe place to be consulted whenever necessary.
- If the product has contact with fluids without being prepared, it must immediately disconnect from the power supply to avoid short circuits, and consult a specialized technician.
- Ensure that technician has provided you the product manual and informed you how to handle the product in an emergency.
- If the system requires any repair or modification, unlock the automatism, turn off the power and do not use it until all safety

conditions have been met.

- In the event of tripping of circuits breakers or fuse failure, locate the malfunction and solve it before resetting the circuit breaker or replacing the fuse. If the malfunction is not repairable by consult this manual, contact a technician.
- Keep the operation area of the motorized gate free while the gate in in motion, and do not create strength to the gate movement.
- Do not perform any operation on mechanical elements or hinges if the product is in motion.

## RESPONSABILITY

- Supplier disclaims any liability if:
  - Product failure or deformation result from improper installation use or maintenance!
  - Safety norms are not followed in the installation, use and maintenance of the product.
  - Instructions in this manual are not followed.
  - Damaged is caused by unauthorized modifications
  - In these cases, the warranty is voided.

## **MOTORLINE ELECTROCELOS SA.**

Travessa do Sobreiro, nº29  
4755-474 Rio Côvo (Santa Eugénia)  
Barcelos, Portugal

## SYMBOLS LEGEND:



• Important safety notices



• Useful information



• Programming information



• Potentiometer information




• Connectors information



• Buttons information

# 02. CONNECTION SCHEMES


## COMPONENTS CONNECTION

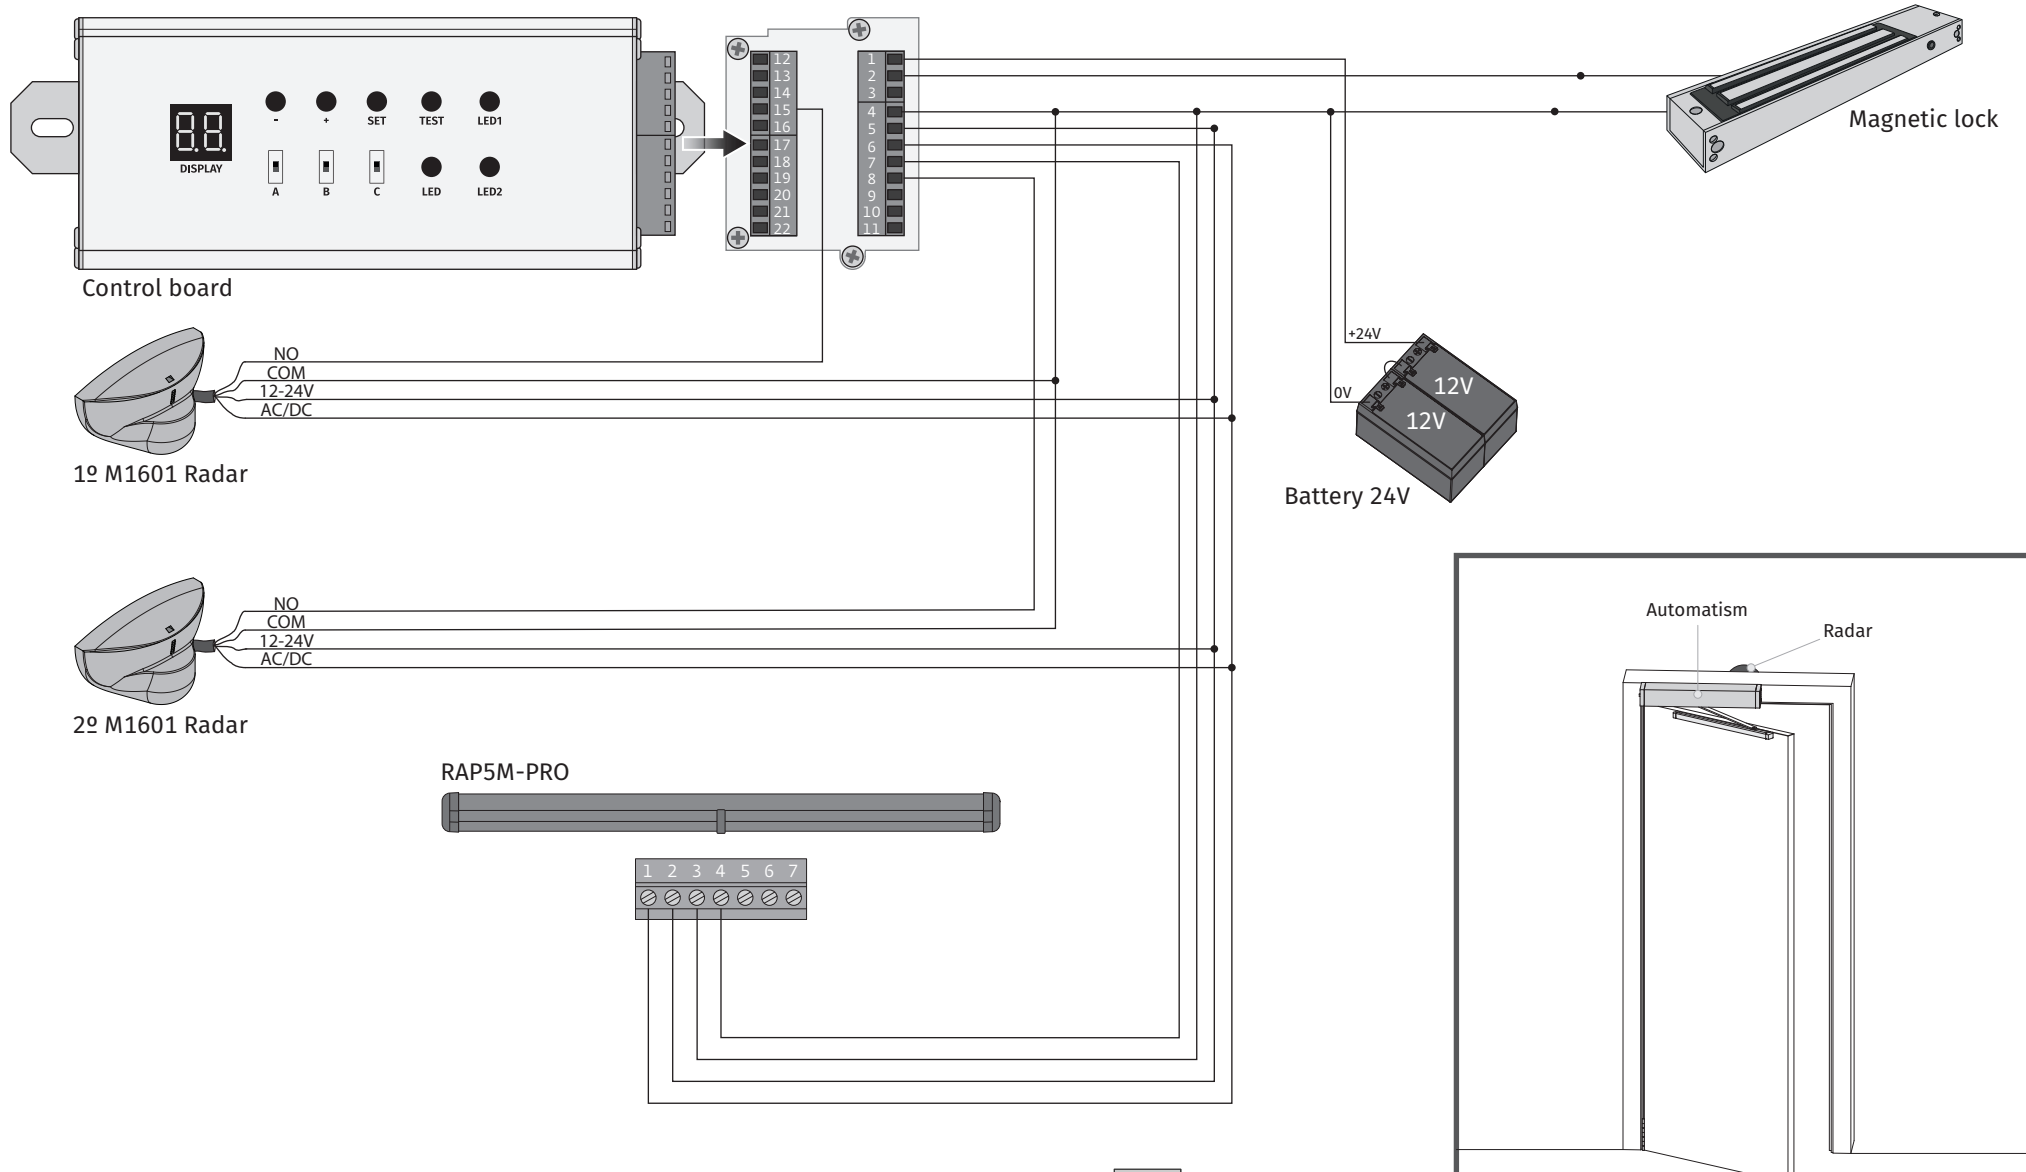

The electro lock current can not exceed 600mA.  
All connections should be made with the power supply disconnected.



## 02. CONNECTION SCHEMES

### RADARS AND PROGRAM SELECTOR CONNECTION

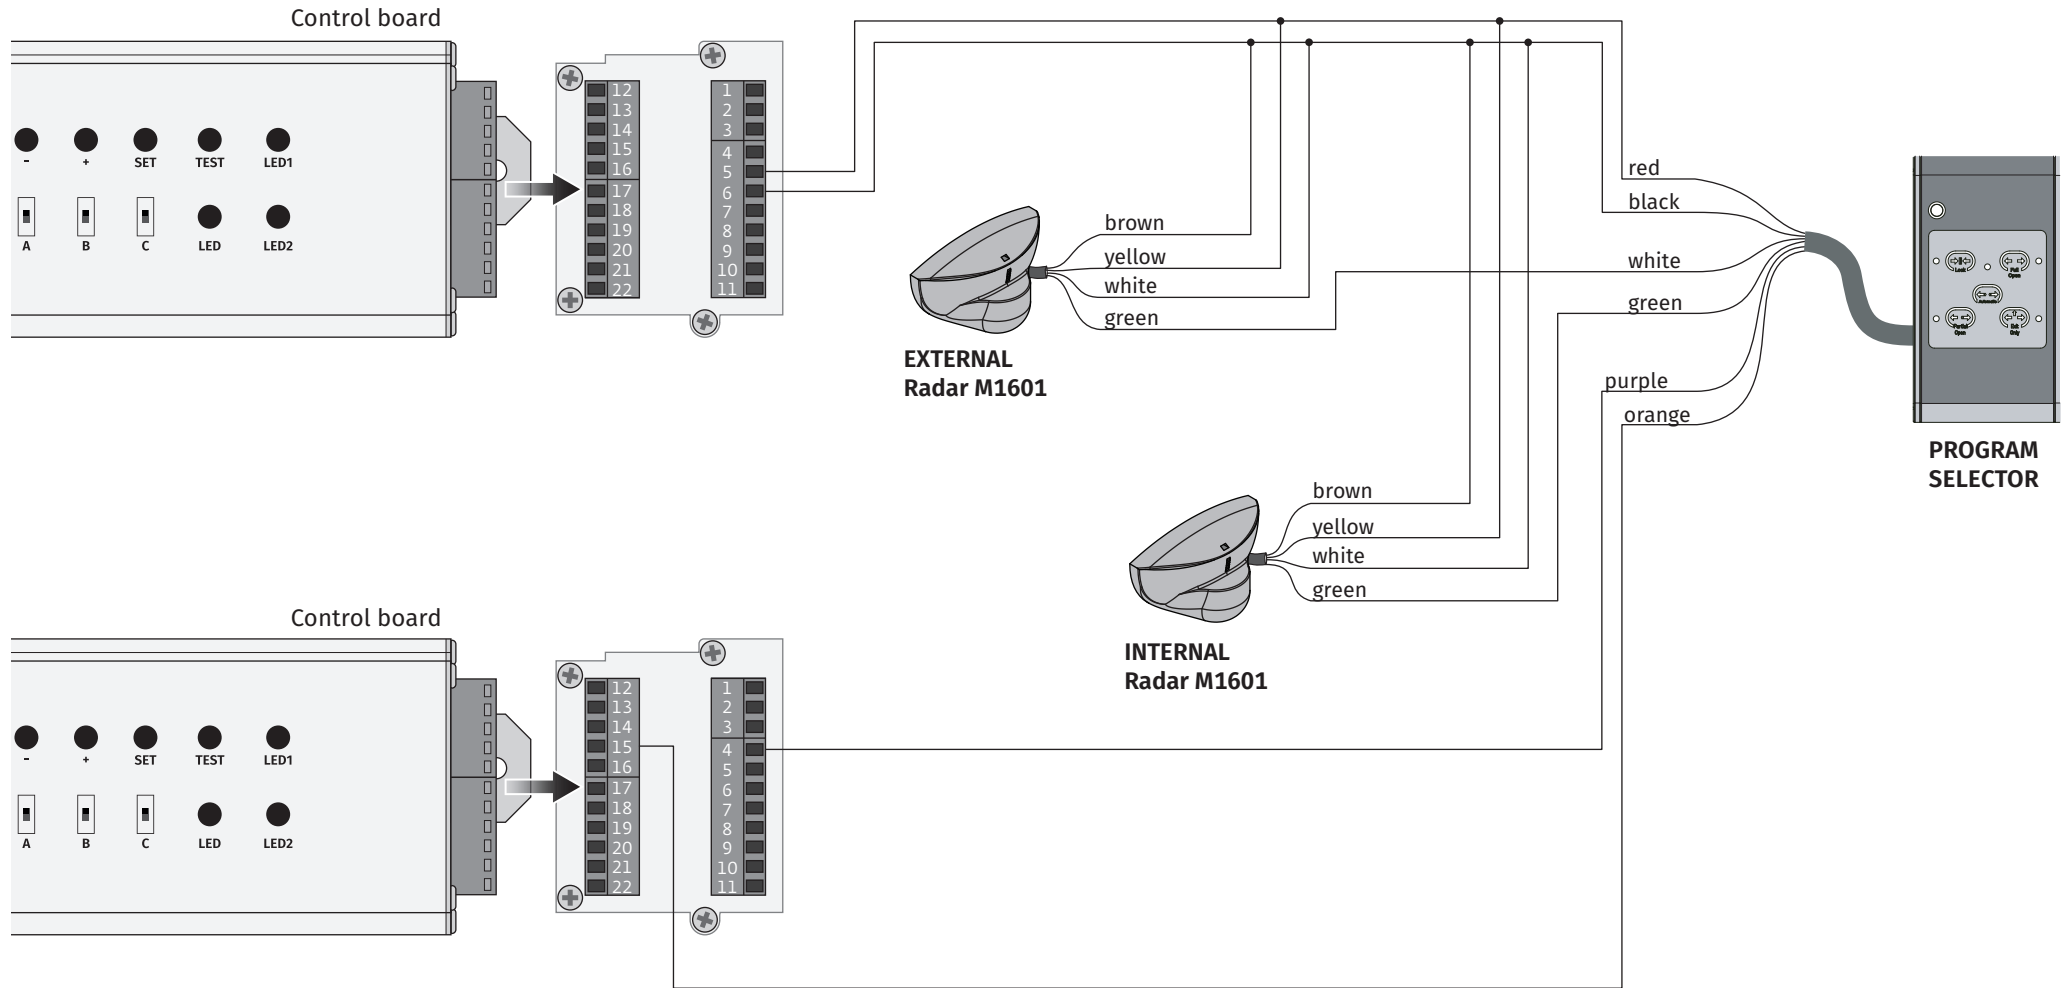

## 02. CONNECTION SCHEMES

### CONNECTION OF 2 SINGULAR DOORS WITH INTERLOCK

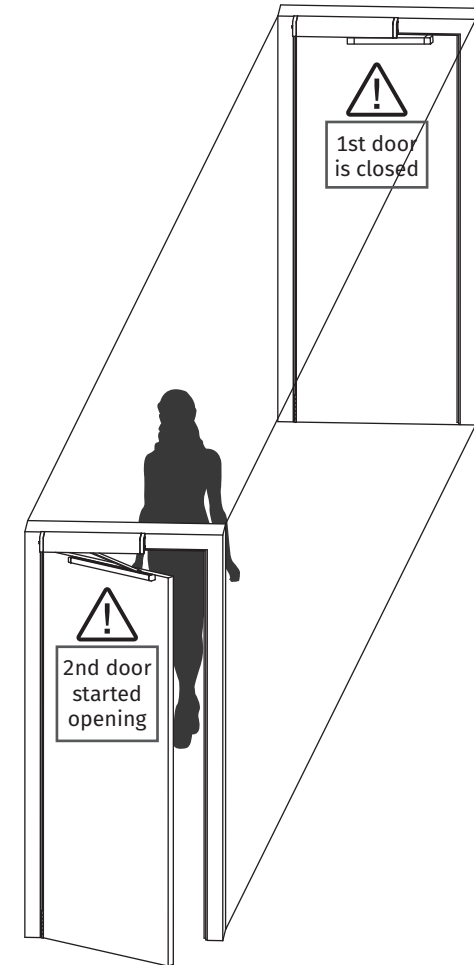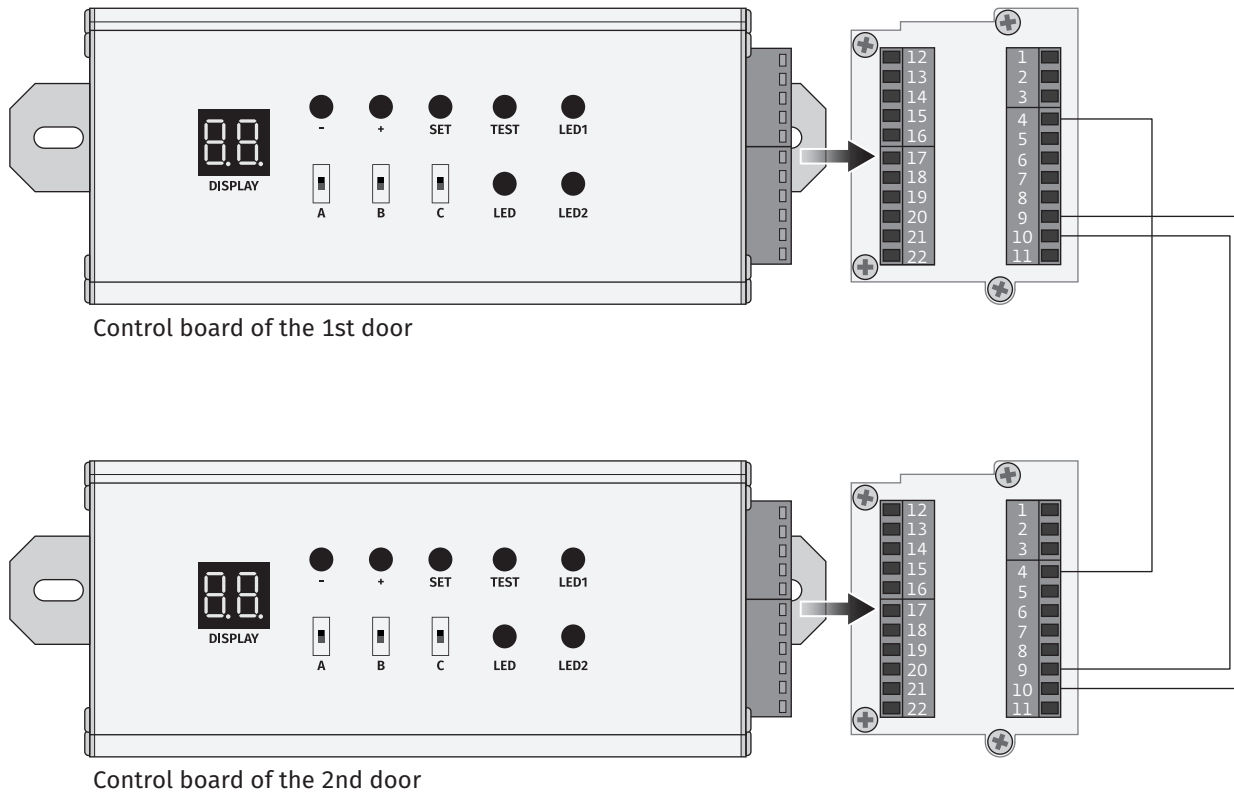

**Operation:** When using 2 singular doors with interlocking, connected to each other, you should be aware these connections.  
Only when one of the doors is closed, the other can open. When using this function, if one of the doors is disconnected from the electric current, the other will not open.




All connections should be made with the power off.

## 02. CONNECTION SCHEMES

### DOOR WITH 2 LEAVES



**Operation:** When using a door with two leaves, you should note these connections. This function will allow the two sheets work in a coordinated manner.

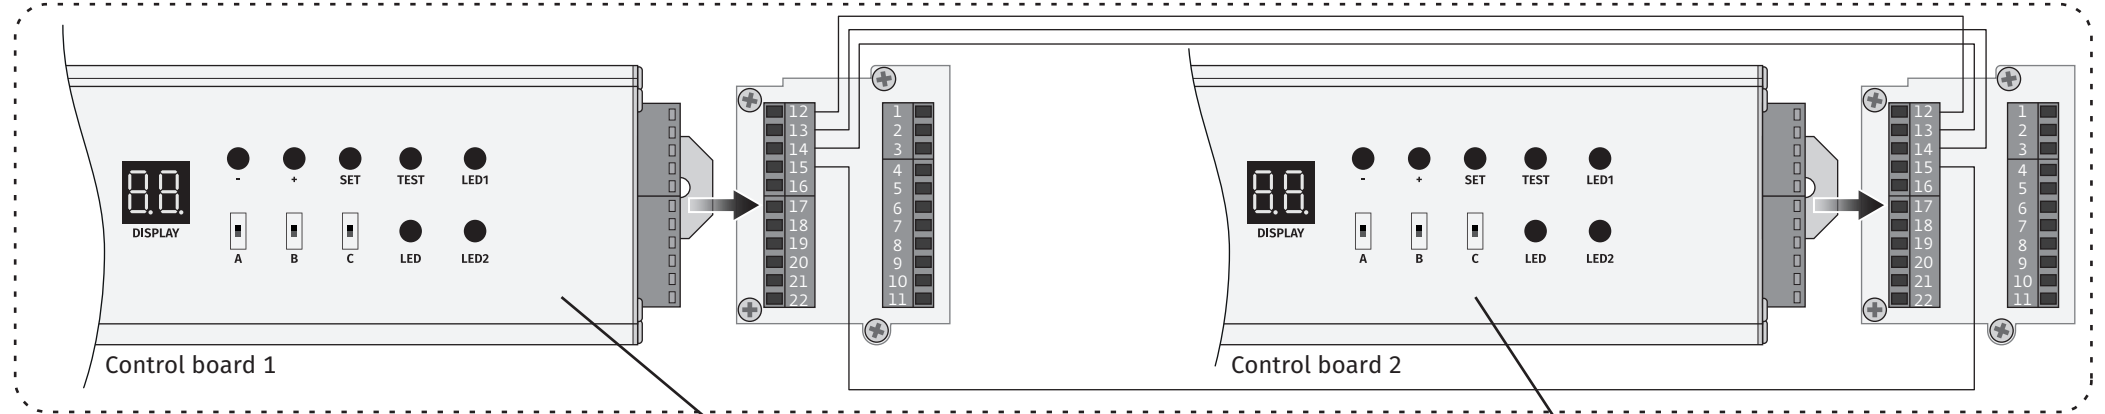

#### When using a kit of two sheets:

- 1 - LED 2 of both switches must be ON.
- 2 - When the door input is set to leaf 1, LED 1 must be ON and LED 1 of the opposite panel must be OFF.
- 3 - Leaf 1 will open first than leaf 2. When closing, the maneuver is carried out simultaneously by the two leaves.
- 4 - The 2-leaf and interlocking-leaf systems cannot be used, otherwise the two automatic doors will not work correctly.


#### Combination to turn on LED's

To turn on/off any of the LEDs, you must be pressing the combinations while connecting the control board to the power supply:

**LED 1** - Button + with Button -

**LED 2** - Button SET with Button +

DOOR 1	LED 1 ON- Master
DOOR 1	LED 2 ON - 2 doors ON
DOOR 2	LED 1 OFF - Slave
DOOR 2	LED 2 ON - 2 doors ON

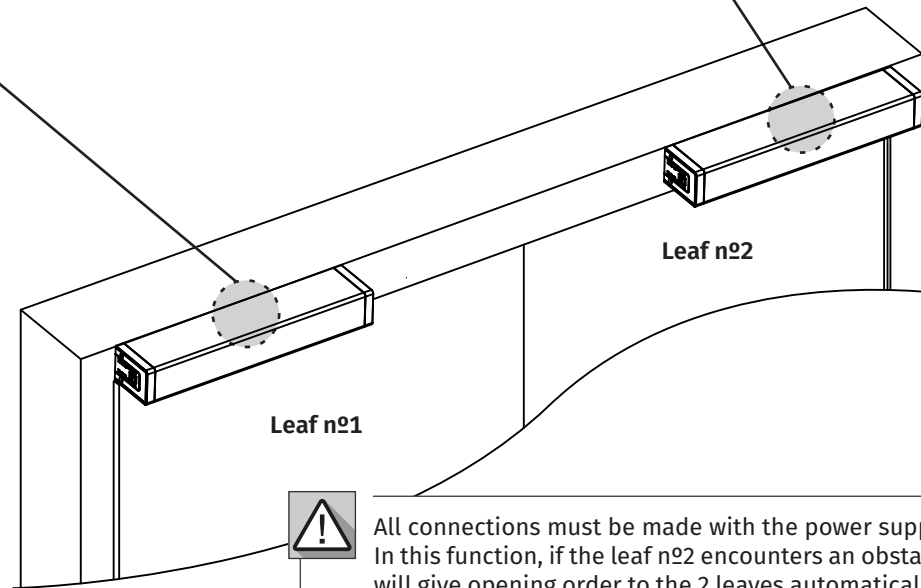

All connections must be made with the power supply disconnected. In this function, if the leaf n°2 encounters an obstacle during closure, the micro will give opening order to the 2 leaves automatically, to ensure that the closure will be done correctly.





## 03. THE AUTOMATION

### TECHNICAL CHARACTERISTICS

The **M1805 ECO** is an automation with anodized aluminum chassis, developed to use in pedestrian doors up to 120kg.

- The control board is microprocessor controlled and does self programming. Users only need to select the speeds and the pause time.
- The automation has obstacle detection function and self-protection for overheating, overvoltage and overcurrent.


• Power Supply	230Vac 50Hz
• Potency	65W/100W
• Door Type	Opening to the right or left Internal or external opening
• Opening angle	90°
• Opening speed (90°)	Adjustable
• Closing speed (90°)	Adjustable
• Pause time in opening	0.5 - 10 seconds
• Manual strength	<30N
• Consumption	65W/100W
• Operating temperature	-30°C to +50°C
• Door's maximum weight	120kg
• Accessories output	500mA
• Eletric lock output	600mA

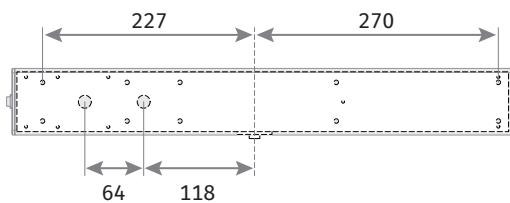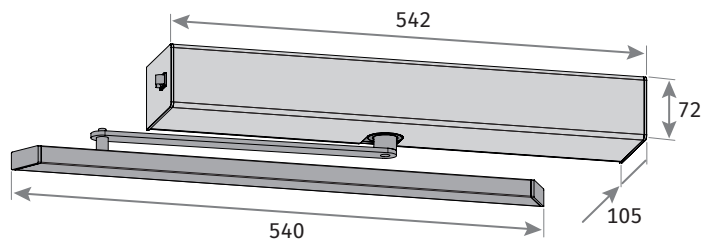


Dimensions in mm

## 03. THE AUTOMATION

### TECHNICAL CHARACTERISTICS


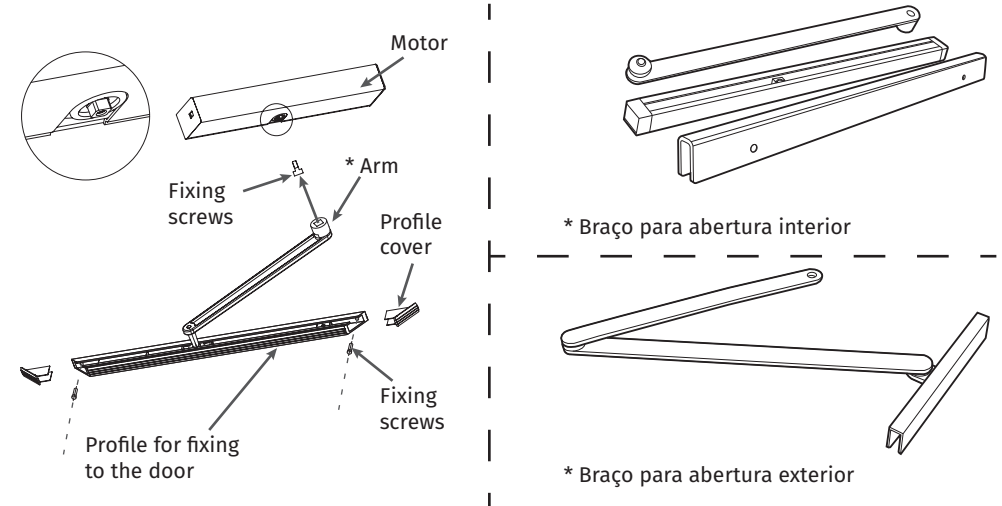


### WIDTH/WEIGHT RATIO

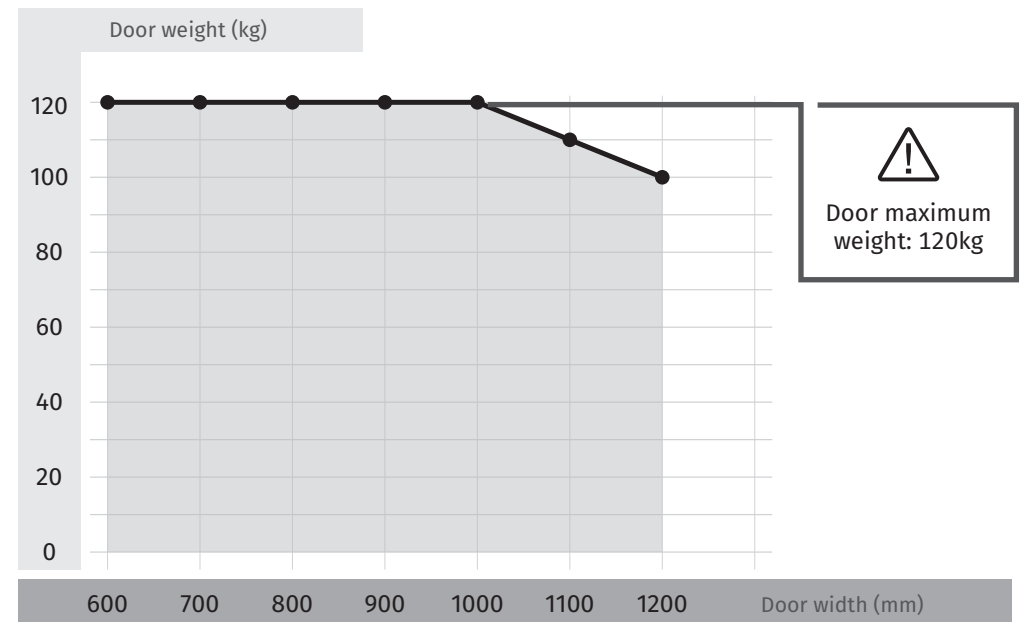

# 04. PRE-INSTALLATION

## INSTALLATION MEASURES | OPENING DIRECTION

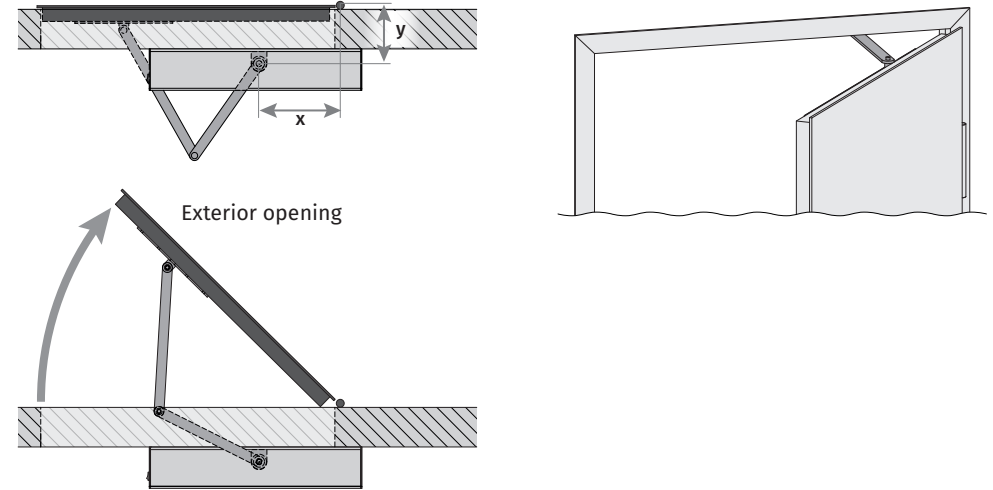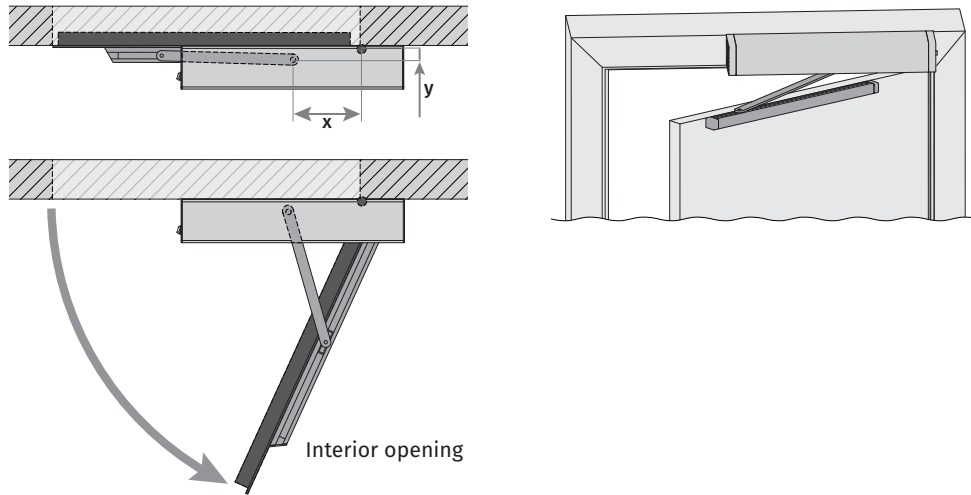

Maximum opening angles for the several combinations of allowed dimensions:

Quotas Y	INTERIOR OPENING										
	Quotas X										
	230	240	250	260	270	280	290	300	310	320	330
-40	109°	100°	93°								
-30	111°	102°	95°								
-20	114°	105°	97°	91°							
-10	116°	107°	100°	93°							
0	120°	110°	102°	96°	90°						
10	120°	112°	104°	97°	92°						
20	120°	114°	106°	100°	94°						
30	120°	116°	108°	101°	96°	91°					
40	120°	118°	110°	103°	98°	93°					
50	120°	120°	112°	105°	99°	94°	90°				
60	120°	120°	114°	107°	101°	96°	92°				
70	120°	120°	115°	109°	103°	98°	93°				
80	120°	120°	120°	110°	104°	99°	95°	90°			
90	120°	120°	120°	112°	106°	101°	96°	92°			
100	120°	120°	120°	113°	107°	102°	97°	93°			
110	120°	120°	120°	114°	109°	103°	99°	94°	91°		
120	120°	120°	120°	115°	110°	104°	100°	96°	92°		
130	120°	120°	120°	116°	111°	106°	101°	97°	93°		
140	120°	120°	120°	120°	112°	106°	102°	98°	94°	90°	
150	120°	120°	120°	120°	112°	107°	103°	98°	95°	91°	


Maximum opening angles for the several combinations of allowed dimensions:

Quotas Y	EXTERIOR OPENING										
	Quotas X										
	180	190	200	210	220	230	240	250	280	290	300
110	120°	120°	120°	114°	105°	97°	91°				
120	120°	120°	120°	110°	101°	94°					
130	120°	120°	117°	107°	98°	91°					
140	120°	120°	113°	103°	95°						
150	120°	120°	109°	100°	92°						
160	120°	117°	105°	96°							
170	120°	113°	102°	93°							
180	120°	109°	99°	90°							
190	118°	105°	95°								
200	114°	102°	92°								
210	111°	99°	90°								
220	108°	96°									
230	105°	94°									
240	103°	91°									
250	101°										

# 05. INSTALLATION

## INSTALLATION PROCESS

### • INTERIOR OPENING

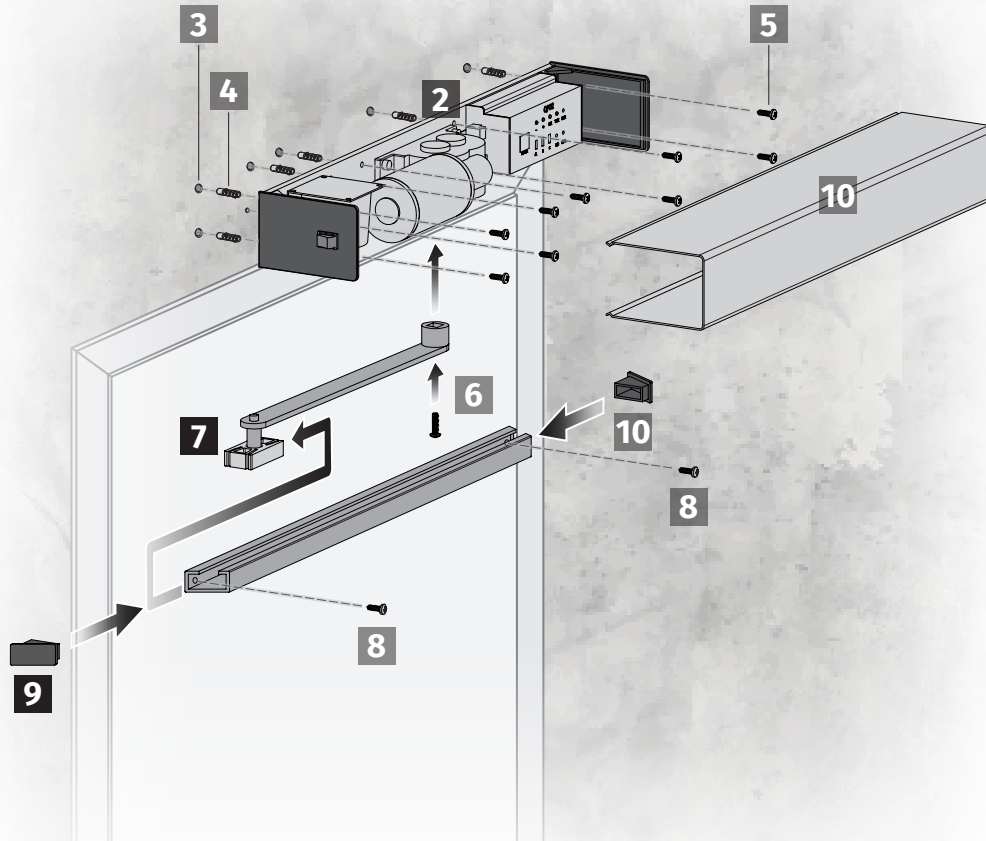

1 Remove the front cover of the automation, with the help of two screwdrivers.

2 Position the fixing body on the wall and make the markings.

3 Drill holes in the marked places.

4 Apply bushings in the holes made.


5 Direct the motor body and apply the screws, tightening completely.

6 Fit the arm onto the shaft and tighten the corresponding bolt.

7 Insert the door guide into the existing square in the arm.  
*(Only for INTERIOR OPENING)*

8 Fix the guide/plate to the door.

### • EXTERIOR OPENING

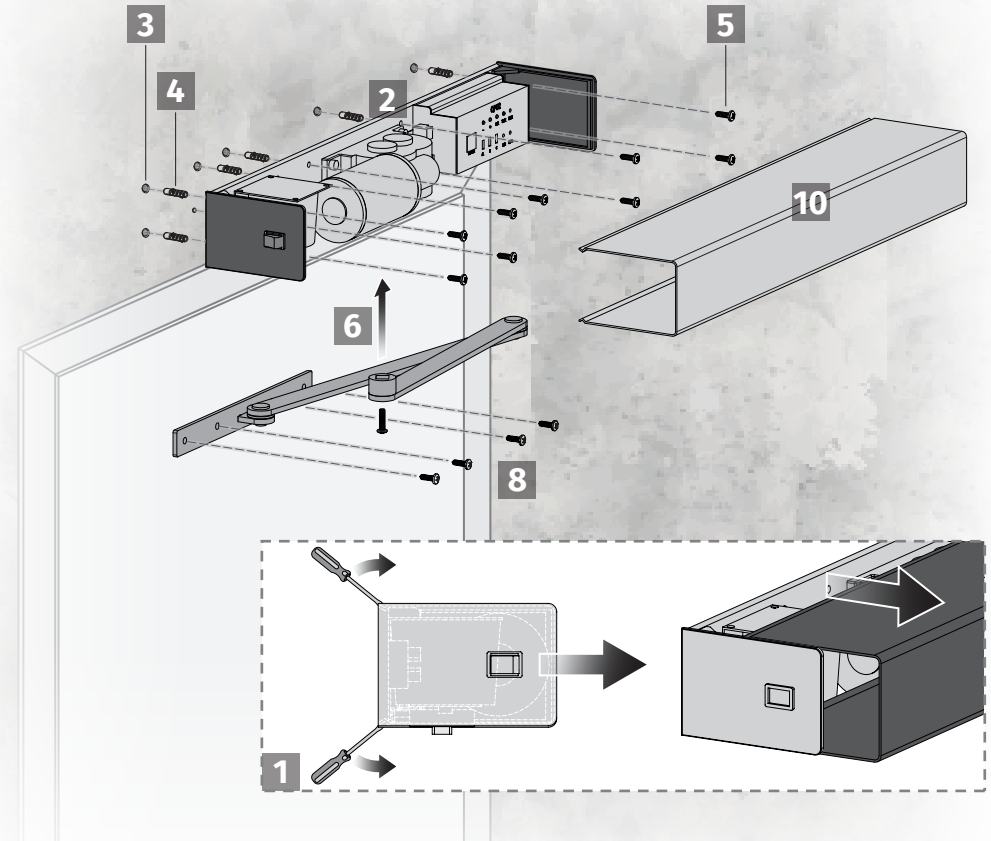

9 Apply the side covers to the guide.  
*(Only for INTERIOR OPENING)*

10 Apply the motor cover.

## 06. THE CONTROL BOARD

### TECHNICAL CHARACTERISTICS

-	Decrease button
+	Increase button
SET	Select function button
TEST	Test button (START)
LED1	For 2-leaf system - ON sets sheet 1
LED	Signal light - sensor signal indicator
LED2	Signals 2-leaf system active

	Dippers	
	ON	OFF
A	Left opening	Right opening
B	<b>Second sensor switch</b> sensor and secondary induction selection switch. With this option, an order occurs on radar 1 and radar 2 at the same time.	<b>Second sensor switch disabled</b>
C	Disable lock	Activates 2/4 output for lock

## 06. THE CONTROL BOARD

### TECHNICAL CHARACTERISTICS

Conectores	1 • +24V battery power input
	2 • Magnetic lock or impulse lock module
	3 • +12V auxiliary power supply
	4 • GND
	5 • +24V component power supply
	6 • GND
	7 • Opening safety photocells (NO)
	8 • 2nd radar input
	9 • Two door interlock entry - Interlock
	10 • Double Door Lock Output - Interlock
	11 • Backup Power Function Selection
	12 • Double common - for 2-sheet system
	13 • Dual output - for 2-sheet system
	14 • Double entry - for 2-sheet system
	15 • 1st radar entry
	16 • Safety photocells in the closing (NO)
	17 • FUTURE USE
	18 • FUTURE USE
	19 • FUTURE USE
	20 • FUTURE USE
	21 • FUTURE USE
	22 • FUTURE USE

### PROGRAMMING



• Before connecting the automation to the current, the stop must be installed, so that the control board can recognize the course.

Turn on the electrical current. The door will work as follows:

Opens slowly → Closes (to memorize position) and stays in normal operation after this cycle is completed.


#### To activate LED1 and LED2 functions:

- 01 • Turn off power supply
- 02 • Press "+" and "-" simultaneously and turn on the power
- 03 • LED 1 will light up and the door starts recognizing

- 01 • Turn off power
- 02 • Press "+" and "SET" simultaneously and turn on power
- 03 • LED 2 will light up and door recognition starts

## 06. THE CONTROL BOARD

### DIGITAL DISPLAY AND FUNCTIONS

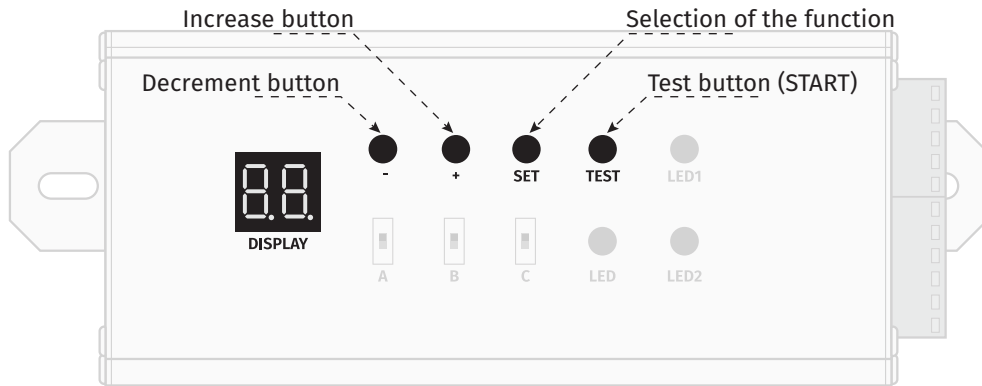

- 88 Opening speed (1 to 32)
- 82 Deceleration distance on door opening (1 to 32)
- 83 Door slowdown speed (1 to 32)
- 84 Closing speed (1 to 32)
- 85 Closing deceleration distance (1 to 32)
- 86 Closed automation force (1 to 32)
- 87 Pause time (1 to 20 - 20 corresponds to 10 seconds)
- 88 Start force (1 to 25)

# 07. TROUBLESHOOTING

## INSTRUCTIONS FOR FINAL CONSUMERS / SPECIALIZED INSTALLERS

Anomaly	Procedure	Behavior	Procedure II	Find source of the problem	
• Door/Motor doesn't work	• Make sure you have a 230V power supply connected to the control board and if it is working properly.	• Still not working	• Consult a qualified MOTORLINE technician.	1 • Open the control board and check if it has a 230V power supply; 2 • Check the control board input	fuses (switch);  3 • If the motor does not work, remove it and send it to the MOTORLINE technical services  for diagnosis.
• Door/Motor doesn't move but makes noise	• Turn off the 230V power supply and move the door manually to check if there are mechanical problems.	• Found problems?	• Consult an experienced door expert.	Check all axes and motion systems associated with the door and automatism (shafts, hinges, etc.) to find out what the problem is.	
		• The door moves easily?	• Consult a qualified MOTORLINE technician.	If the door works, the problem is in the motor. Remove it and send it to the MOTORLINE technical	services for diagnosis;
• Door/Motor opens but doesn't close	• Turn off the 230V power supply and move the door manually to the closed position. Turn off the building electric board for 5 seconds and then turn on.	• The door opened but did not closed.	1 • Check if there is any obstacle in front of the photocells; 2 • Check if any of the door control devices (key selector and push button) are locked and are sending permanent signal to the control board; 3 • Consult a qualified MOTORLINE technician.	<b>A) SAFETY SYSTEMS (Opening security systems NO; Closing security systems NO):</b>  1 • Disconnect everything from the Security input. If the automation starts to work normally, analyze which device is the problem.	2 • Replace the defective device with a functional one. Check if the automation works correctly again. If not, repeat step 1 to discover another malfunctioning device.
• Door/Motor doesn't make complete route	• Turn off the power supply and move the door manually to check if there are mechanical problems.	• Found problems?	• Consult an experienced door expert.	Verifique todos os eixos e sistemas de movimento	associados aa porta e ao automatismo (rodas, dobradiças, etc) para descobrir qual é o problema.
		• The door moves easily?	• Consult a qualified MOTORLINE technician.	1 • Make a new programming course in control board attributing the necessary times to open and close with appropriate force.	2 • If that does not work, remove the control board and send it to the MOTORLINE technical services for diagnosis.  <b>NOTE:</b> The control board strength must be sufficient to open and close the door without stopping, but a person must be able to stop it with small effort. In case of safety systems failure, the door will never cause physical damage to the obstacles (vehicles, people, etc.).